
# **MULTILINE SERIES**

THREE-PHASE UPS From 10 to 80 kVA / kW







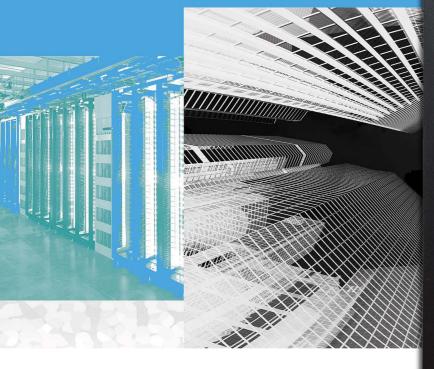

Automatic soft-start

**Advanced Battery Management** 

Cold start

**Dual Input** 

**Advanced Communication Capabilities** 

Perfect Generator Compatibility

Programmable dry contacts

Remote monitoring and management software

# **COMPLETE, COST EFFECTIVE SOLUTION**

Online double conversion mode with an real full power, according to IEC 62040: kW=kVA (unity power factor design) means 25% more active power available compared to legacy UPS.
 Dual input mains allow you to manage independent power sources.

 Increased system availability placing UPS in parallel for N+1 and N+X redundancy.

> Internal manual bypass for easy maintenance without power interruption.

> > Up to 8 pcs parallelable.

Multi language big LCD display.

## **TAILORED TO YOUR ENVIRONMENT**

Low noise level and higher fan life time with intelligent fan speed control.
Flexible battery solutions.

· Compact, lightweight and easy to install.

· Frequency converter mode.

 Extended battery life with exclusive battery charging management for increased battery life.

All in one: 1/1, 1/3, 3/1 and 3/3 phase configurations.
Adjustable battery quantity.

## LOWEST TOTAL COST OF OWNERSHIP


• Thanks to three level inverter design and a multi mode architecture that makes real time decisions between premium protection mode and premium efficiency mode brings efficiency up to 96% at 50% online load operation.

10% saving on energy losses compared to legacy UPS gives significant savings in energy. Significant reduction in energy loss.
 Reduced energy usage, air conditioning requirements and cooling operating costs.


Energy Saver mode for global efficiency improvement on parallel systems.
Up to 35 percent smaller than similar competitive solutions.
Saves space with a reduced footprint.

### **EASY MAINTENANCE**

- Built-in manual bypass to eliminate maintenance related downtime.
  - Proactive detection of fan failure and switch fault for early diagnosis on UPS malfunction.
  - Plug and play card design to simplify the maintenance process.
    - Easy service by the help of modular power board concept.
      - MTTR is less than 30 minutes.
- · Lower spareparts cost by using common boards for different ratings.

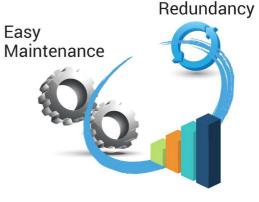


Scalability

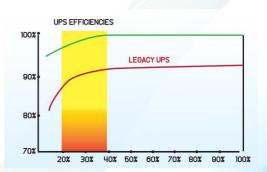



### **INTELLIGENT BATTERY MANAGEMENT SYSTEM**

- Thanks to intelligent battery management system increase 35% battery life and maximizes battery performance, life time and reliability through intelligent charging.
  - Temperature compensated battery charging monitors performing measurement of external and internal battery temperature and adjusting the charge current rate accordingly.
  - Intelligent battery management system can sustain battery lifespan and the capacity of battery backed up through the functions of;
     Monitoring & compensation battery remaining capacity displayed in percentage.
    - Overcharge/discharge protection.
      - · Auto/manual battery test.
- Adjustable 20-40 battery units in one battery cabinet optimizes investment.
   Three charging modes ensure maximum battery availability:
  - Constant current charging provides maximum rated current to the battery until the voltage rises to a pre-determined limit. A boost voltage is provided for a short term to
  - reduce the battery recharge interval. Float charging maintains the battery at the recommend voltage. *Adjustable battery charging time due to the level of the load to save from energy cost.*

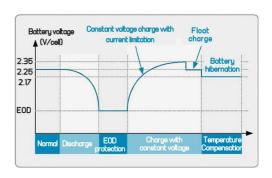



### HIGH PERFORMANCE RECTIFER

### **CLEAN INPUT PERFORMANCE**


Thanks to the technology used, UPS solves installation problems in systems where the power supply has limited installed power, where the UPS is also powered by a generator or where there are compatibility problems with loads that generate harmonic currents; UPS has zero impact on its power source, being either the mains power supply or a generator. IGBT based rectifier and innovative control algorithm ensures an input Total Harmonic Distortion (THDi) of less than 3% and draws a pure sinusoidal waveform from the mains. This also provides UPS input power factor of 0.99.

#### Advantages;

- Saving in the sizing of upfront equipment e.g. emergency generators, cablings and circuit breakers.
- No disturbances to nearby equipment; eliminate perturbation and outage on upfront electrical equipment, avoiding also any investigation and analysis cost due to malfunction In addition, UPS plays a filter and power factor correction role in the power network upstream of the UPS, as it eliminates harmonic components and the reactive power generated by the powered utilities.

# PROGRAMMABLE SOFT START

Start up delay function, to restart the rectifiers when mains power is restored if there are several UPS in the system. The programmable soft start allows the rectifier to ramp up in a programmable time period (0-15 seconds) thus eliminating in-rush current. This feature reduces the need of oversizing the input power system (gensets, feeder cables, and over current devices).

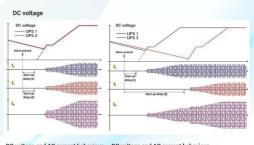

using the same value for delay time

using different values for delay time



### PERFECT GENERATOR COMPATIBILITY

User programmable features such as slew rate, phase angle rate of change and voltage rate of change allow the UPS to quickly sync to a genset during emergency back. Thanks to its robust IGBT rectifier it is enough to choose generator with power only 20% higher rated than the UPS.

### **HIGH GRID ADAPTABILITY**

- 138-485 Vac wide input voltage range to minimize battery use: 485-305Vac for 100% load; 305-138 Vac for 100%-40% load (derating linearly)
  - 6 kV/5 kA lightning protection design, reducing lightning related failure rate.

# Areas allowing load rate >50% Multiline UPS Input Voltage Range Typical UPS Input Voltage Range 100 150 200 250 300 350 400 450 500 Input Voltage Range (V)

## **OUTPUT PERFORMANCE**

### High Output Power factor 1 = Real Power (kW)

Real full power, according to IEC 62040: Output power factor of 1 (kW=kVA) rate provides 25% more active power compared to traditional UPS. Suitable for latest generation of servers (leading or unity power factor) without any reduction in active power from 1 leading to 1 lagging. Suitable also for leading power factor loads down to 0.9 without apparent power derating.

# **TOTAL HARMONIC DISTORTION (THD)**

A distorted output voltage waveform affects the proper function of the load's equipment. The Multiline Series has very low output voltage THD, eve with connected 100% unbalanced or 100% non-linear loads.

# TRANSIENT RESPONSE

Transient response is very fast due to to control algorithms which reduces the need to oversize the UPS for pulse load applications.


# REDUNDANT PARALLEL FEATURES

Thanks to unique control technology that can parallel UPS modules with true redundancy by eliminating any single point of failure, RPA provides a scalable paralleling technique that reduces operating footprint and increases system reliability by eliminating the need for external paralleling equipment and cabinets (centralized bypass and master control). One of the UPS modules in the system intelligently takes the leadership role, while the other UPS modules have access to all control parameters. If one UPS fails to operate, the load is automatically redistributed among the others.

If the lead UPS fails to operate, then another UPS automatically takes on the leadership role.

### Parallel Operation Features;

- · Parallel connection with ring cable.
  - · Sequential Soft Start.
  - ·Loop bus connection.
  - · Distributed Control Logic.
- · Autosensing disconnected parallel cable.
  - · Redundant Communication.
- · Easy power update without any interruption.
  - · Full synchronization of parallel units.
    - · Isolated parallel operation card.
      - · Static bypass for all units.
      - · No Single Points of Failure.

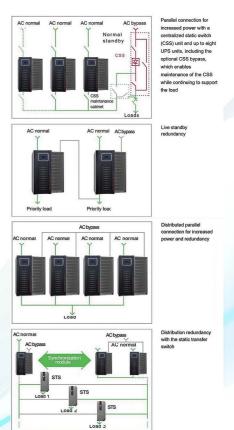



### **SELF LOAD POWER TEST**

Only 4% incremental energy consumption. Full power test of Rectifier, Inverter, Bypass, Chokes, Capacitors, Cables and Fuses. Customer load safely supplied through maintenance bypass dummy load free.

# **SOFTWARE & CONNECTIVITY SOLUTIONS**

Local communication with RS232 and RS485.
 2pcs configurable input contact.

·Relay board with alarms.

· GenSet contact.

· EPO contact.

·USB.

. . .

· Remote Monitoring Panel.

Battery Temperature Sensor for Temperature

Compensated Charging.

· JBUS, PROFIBUS Local connection.

· SNMP IT Manager monitoring.

· Environment sensors for Data Centers

(Humidity, Temperature, Smoke, etc.).

· GSM, Telnet, GPRS communication.


·PC & Server shutdown.


· Web page remote monitoring.

· Building management system.

· E-mail alarm reporting.

· Remote monitoring 24/7 T.Service.

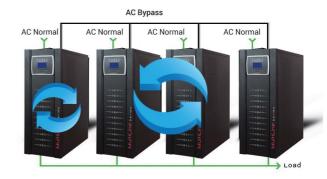

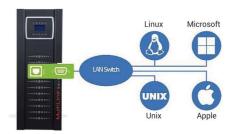





# **Multiline Series**

10 10 <b>MLU 3305</b>	15 15	20	30	40	60	80	
MLU 3305		20	0.0				
		20	30	40	60	80	
261	MLU 3307,5	MLU 33010	MLU 33015	MLU 33020	MLU 33030	MLU 33040	
5	7,5	10	15	20	30	40	
5	7,5	10	15	20	30	40	
Three Level On-Line double conversation VFI-111							
Sinusoidal							
Stand Alone or Distributed Parallel up to 8 units							
l l	000	400 415 1/05		0.0001.0011	. DELL		
			≤3%				
				==:: 7: !!		D.	
× = × =							
on production of the control of the							
Segue 7 ros Segue							
·							
		<2	% (at full linear l	oad)			
1		V/DI 4		_			
39 2 2							
			Fleseiit				
_		Puilt in Autor	natio and Maint	ananco Pynaco	<u> </u>		
303							
150% for 1 minutes							
· · · · · · · · · · · · · · · · · · ·							
Available							
			Available				
812x3	02x715	991>	302x862		1200x430x96	0	
48	51	65	71	105	125	140	
	e	•	0°C - 40°C			,	
-15°C/+ 55°C							
	20-25°C						
	<95% non condensing						
	<55						
	IP 20						
FN 62040	)-1-1 (Safety) FN 6	52040-2 (FMC) FI	V 62040-3 (Perfor	mance)			
	48	380, 400, 415 V 3  50  RS232,Genset,  812x302x715  48 51	Stand Alone or  380, 400, 415 V 3Ph  380, 400, 415 V 3Ph+N+PE*, 200-  Up  50/ 60Hz +0,01 fr  <2  VRLA- A 2  Unit in Autor  Built in Autor  Graphica  RS232,Genset, SNMP, Relay Co  812x302x715 991x 48 51 65	Sinusoidal Stand Alone or Distributed Para  380, 400, 415 V 3Ph+N+PE*, 200-20  45-65 Hz  (-20)% (+20)% (-36)% (+20)% >0,99  \$3%  380, 400, 415 V 3Ph+N+PE*, 200-208-220V 3Ph+N+ +1%  Up to 96%* (Half li Up to 98,5%  50/ 60Hz +0,01 free run (Adjustatata) 3:1  1  <2% (at full linear li VRLA-AGM Maintenarana Automatic or Maranananananananananananananananananana	Sinusoidal  Stand Alone or Distributed Parallel up to 8 uni  380, 400, 415 V 3Ph+N+PE*, 200-208-220V 3Ph+N  45-65 Hz  (-20)% (+20)%  (-36)% (+20)%  >0,99  \$3%  380, 400, 415 V 3Ph+N+PE*, 200-208-220V 3Ph+N+PE** (Adjustable +1%  Up to 96%* (Halif load)  Up to 98,5%  50/ 60Hz +0,01 free run (Adjustable from LCD Parallel state of the state of t	Sinusoidal   Stand Alone or Distributed Parallel up to 8 units	





The company reserves the right to change specifications and designs without notice.

www.innovasis.com.tr